
Whirlpool

TOP AND CABINET PARTS

AUTOMATIC WASHER

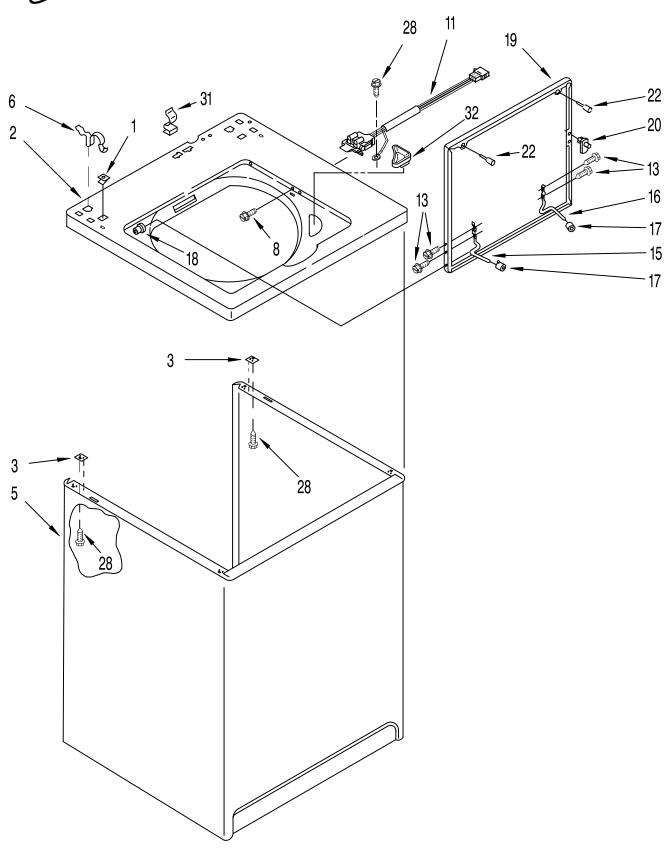


TOP AND CABINET PARTS

Illus. No.	Part No.	DESCRIPTION
1 2	357213	Nut, Push-In (2)
2	00.40.470	Тор
	3949476	
0	3949477	For Almond Model
3	62750	
5		Top (4) Cabinet
5	63424	
	63425	
6	62780	Clip, Top & Cabinet
U	02700	& Rear Panel (2)
8	3356311	Screw & Washer,
O	0000011	Lid Switch (2)
11	3949237	Switch, Lid
13	3351355	Screw, Lid Hinge
		Mounting (4)
15	54584	Hinge, Lid (L.H.)
16	54583	
17	19119	Bumper, Lid Hinge
18	21258	Bearing, Lid
		Hinge (2)
19		Lid
	3361392	For White Models
	3361393	For Almond Model
20	358684	
22	93770	Bumper, Lid (2)
28	384435	Screw,
	000/-	10–16 x 1/2 (5)
31	90016	Clip, Harness
32	3362952	Dispenser, Bleach

CONTROLS AND REAR PANEL PARTS


For Models: LSR8233EQ0, LSR8233EZ0 (Designer White) (Designer Almond)

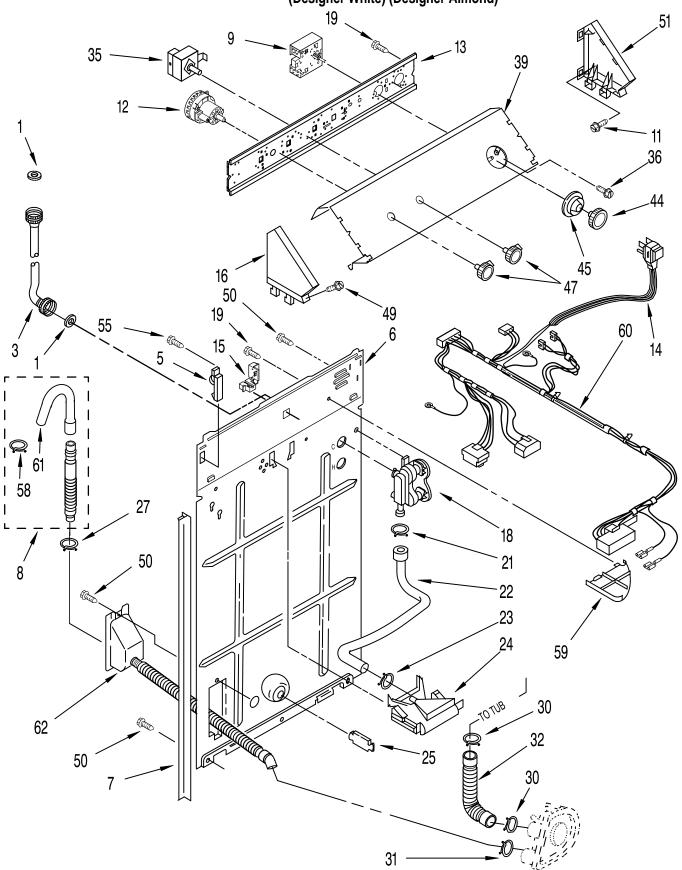

CONTROLS AND REAR PANEL PARTS

Illus.	Part		Illus.	Part		Illus.	Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
	40400	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\				44		Knob, Timer
1	10123	Washer, Water Inlet Hose (4)	16	0050500	Cap, End (L.H.)	44	3364201	For Designer
		(1–1/16 x 5/8)			Almond/Chrome		3304231	White Model
3		Hose, Water	18		White/White		3364293	For Almond Model
J		Inlet (2)	10	3300392	Valve, Water	45		Dial, Timer
	3949368	Blue Coupler	19	90864	Mixing Screw,	10	3946261	For Designer
		Red Coupler	19	90004	10-24 x 3/8 (2)		00 10201	White Model
5		Hinge, Console (2)	21	370451	Clamp, Hose		3946262	For Almond Model
6		Panel, Rear	-	070401	272846 (Alt.)	47		Knob, Controls
7		Pad, Rear Panel			353367 (Alt.)		3950759	For Designer
8		Hose, Drain	22	3357328	Hose, Vacuum			White Model
		(4 ft.)		000.020	Break		3950760	For Almond Model
	661577	Hosé, Drain	23	371503	Clamp, Hose	49	388326	Screw, 8-18 x 1.25
		(9 ft.)	24	387606	Break, Vacuum			(Panel to Top)
		(Not Included)	25		Support, Rear	50	62863	Screw, 10-16 x 3/8
	3357090	Extension			Panel	51		Cap , End (R.H.)
		Drain Hose	27	3366912	Clamp, Hose			Almond/Chrome
		(21 Inches)	30		Clamp, Hose			White/White
		(Not Included.)	31	660628	Clamp, Hose	55	3357011	
9	3949339		32	3950340	Hose, Pump To Tub			10-16 x 1/2
		(60 Hz.)			(Includes #30)	58	3366913	Clamp, Drain
		(Motor Not A	35	3949179	Switch, Water			Hose
		Service Part)			Temperature	59		Shield, Suds
11		Screw 8A x 3/8	36	96435	Screw, Timer	60	3949203	Harness, Wiring
12		Switch, Water Level			Mounting			(Includes Power
13		Bracket, Control			(10-32 x 1) (2)			Cord)
14	3949248	Cord, Power	39		Panel, Console			(For Detail See
		(Power Cord Only, Without Harness)		3950659	For Designer			Page 8.) Also See Clips.
15	3040468	Strain Relief,		0050050	Almond Model	61	2257027	Nozzle-Drain
13	3949400	Power Cord		3950658	For Designer	01	3337027	Hose
		1 OWEI COIG			White Model	62	3361805	Hose-Drain
						02	3301003	Connector Assy
								23700to. 7.00y
					l l	1		

AGITATOR, BASKET AND TUB PARTS

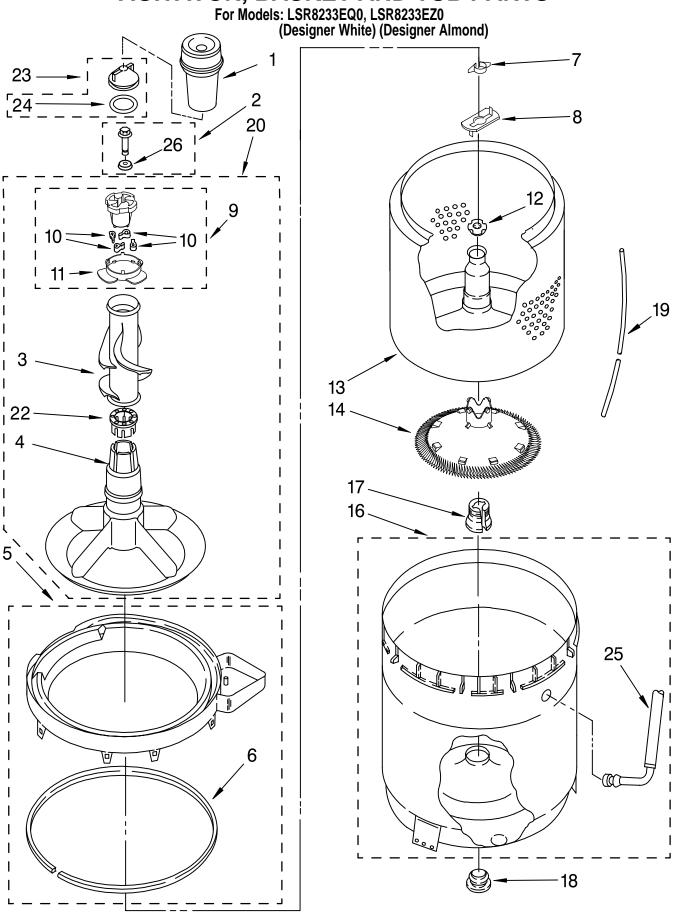


AGITATOR, BASKET AND TUB PARTS For Models: LSR8233EQ0, LSR8233EZ0 (Designer White) (Designer Almond)


Illus. No.	Part No.	DESCRIPTION
1	63580	Dispenser, Assy.
2	358237	Screw & Washer
2	3363003	(5–16–24 x 1) Clothes Mover
3 4	3347288	Agitator
5	63851	Tub Ring & Gasket
6	3359585	Gasket, Tub Ring
7	3354845	Clip, Agitator
8	3355921	Washer, Agitator
9	3363663	Cam Driven
10	3366877	Dog, Agitator
		Clutch
11	3363661	Bearing-Driven
		Cam
12	21366	Nut, Spanner
13	64217	Basket & Balance
4.4	2264040	Ring
14 16	3361948 388893	,
17	389140	Block, Basket
17	303140	Drive
18	383727	Gasket, Centerpost
19	3347780	Hose, Pressure
		Switch
20	3946501	Agitator
		(Complete Asy.)
22	3350389	Spacer, Thrust
23	3354733	Cap, Barrier
24	3348855	Seal, Inner Cap
25	3948705	Hose, Bleach
26	3949550	Washer

MACHINE BASE PARTS

For Models: LSR8233EQ0, LSR8233EZ0 (Designer White) (Designer Almond)

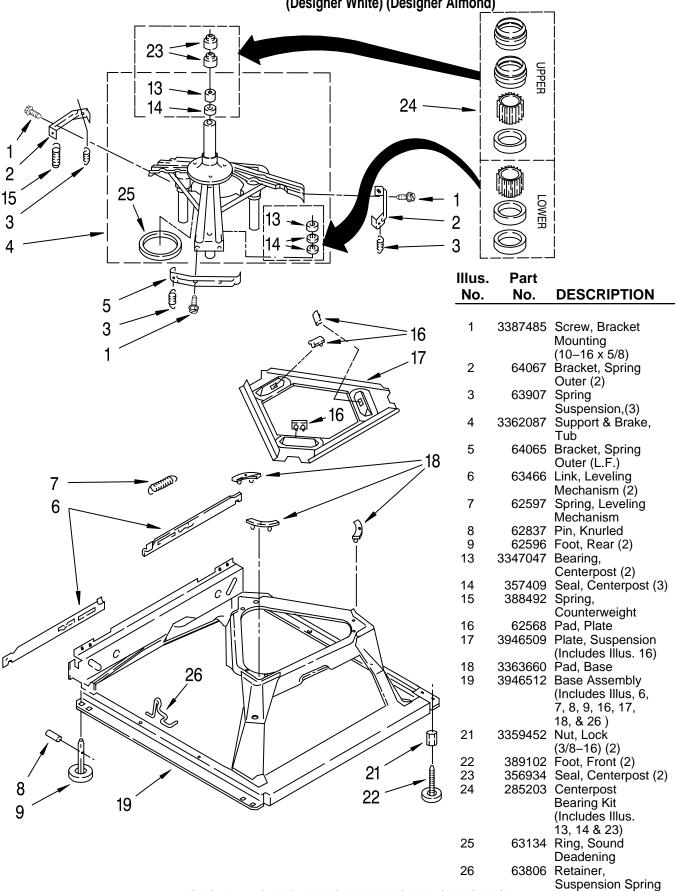


BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS

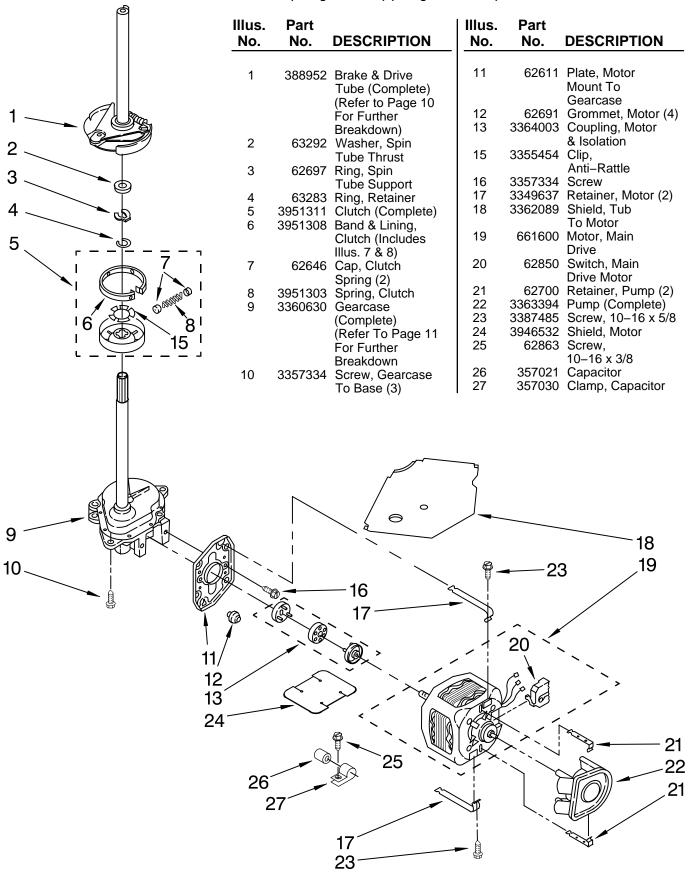

WIRING HARNESS PARTS

For Models: LSR8233EQ0, LSR8233EZ0 (Designer White) (Designer Almond)

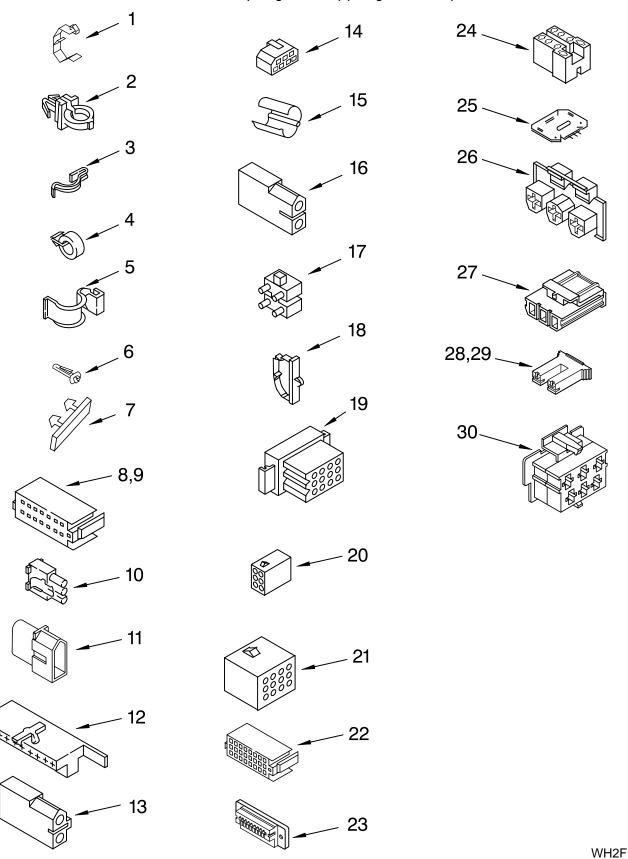

WIRING HARNESS PARTS


For Models: LSR8233EQ0, LSR8233EZ0 (Designer White) (Designer Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1 2 3 4	388498 3347812 3352501	Clip, Harness Clip, Harness Clip, Harness Clip, Harness	13	3348075	Block, Disconnect (Motor 3 Speed) (Use Term. 94613 Or 94614.)	22	3369366	Timer, Block Disconnect (Black) (Amp) (Use Term.3369365)
5 6	3390496	Clip, Harness Clip, Harness	14	3347243	Block, Disconnect (Use Term. 352088)	23 24	3349494 60687	Connector, Etc Connector, Relay
7		Retainer, (Suds Models)	15 16		Protector Connector		00001	(Use Term.308569 Or 338664.)
8	352090	Timer, Block Disconnect (White)	47	007500	(2-Way) (Use Term.94614)	25 26	3407125 3948617	E.T.C. Control Connector (T.P.A.)
9	352089	Timer, Block Disconnect (Black)	17	387566	Plug, Terminal (4–Way) (Power Cord) (Use M3 Screws)			(3-Circuit) (Lid Switch) (Use Term. 3948619 OR 3948620.)
10	62889	Receptacle, Terminal (3–Way) (Lid Switch) (Use Term.94613)	18 19		Clip, Harness Block, Disconnect (12–Way) (Timer) (Use Term. 94613)	27	3360056	
11	353424	Or 94614.) Plug, Terminal (3–Way)	20	3347730	Receptacle (6–Way) (Use Term. 94613)	28	3354925	Block, Connector (Cold Valve) (Use Term.693217)
12	62505	(Power Cord) (Use Term.94613) Block, Disconnect	21	388818	Plug, Terminal (12–Way) (Use Term. 94613	29	3354926	Block, Connector (Hot Valve)
	3_330	(Motor 2 Speed) (Use Term.352088)			Or 94614.)	30	3948615	(Use Term.693217) Connector (T.P.A.) (6–Circuit) (Temp. Switch) (Use Term.3948619 OR 3948620.)

FOR COMPLETE WIRING HARNESS REFER TO CONTROL AND REAR PANEL PARTS PAGE

BRAKE AND DRIVE TUBE PARTS

For Models: LSR8233EQ0, LSR8233EZ0 (Designer White) (Designer Almond)

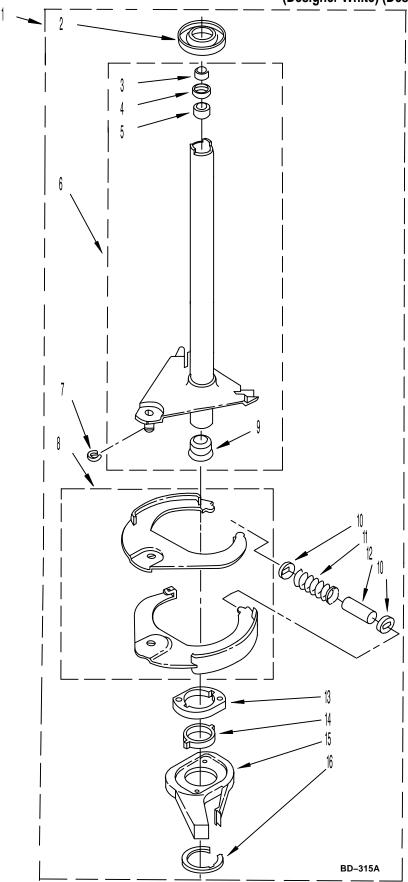


Illus. No.	Part No.	DESCRIPTION
1	388952	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
2 3	91939	Seal, Oil
4	356427	Seal, Drive Tube
5	356937	Spacer, Drive Tube
6	64027	Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9)
7	64035	Ring, Retaining
8	64232	Shoe, Brake
9	62703	"T" Bearing, Spin Tube
10	62648	Cap, Brake Spring (2)
11	387806	Spring (2) Spring, Brake
12	62909	Sleeve, Brake
13	63023	Spring Cam, Brake Release
14	63022	Sleeve, Cam
15	64194	Driver, Brake
16	90368	Cam Ring, Retaining

FOLLOWING PARTS NOT ILLUSTRATED

285208 Lubricant (Use Only In Brake Shoe Assembly On Roller & Pin)


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

GEARCASE PARTS

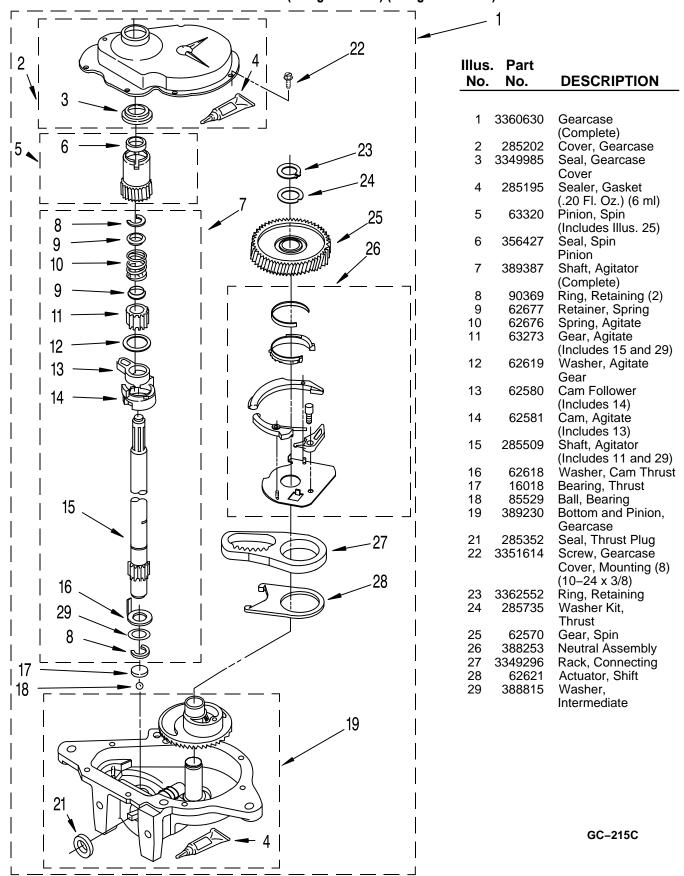

WATER SYSTEM PARTS

For Models: LSR8233EQ0, LSR8233EZ0 (Designer White) (Designer Almond)

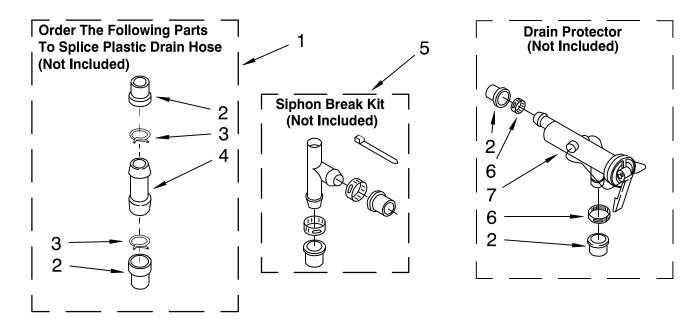


WS400

Illus. No.	Part No.	DESCRIPTION
1	285442	Connector Kit,
		Plastic Drain
		Hose
2	285321	Sleeve Kit,
		(Contains 2
		Sleeves)
3	370447	Clamp, Hose
4	16272	Connector,
		Straight
5	285320	Siphon Break
		Kit
		(Not Included)
6	65349	Clamp, Hose
7	367031	Drain Protector
		(Not Included)

MISCELLANEOUS PARTS

For Models: LSR8233EQ0. LSR8233EZ0 (Designer White) (Designer Almond)

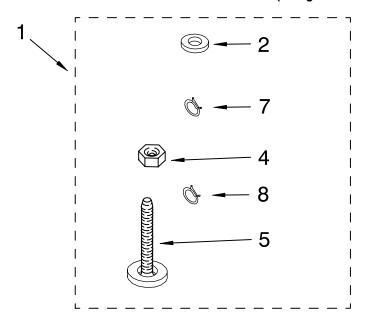

Illus. No.	Part No.	DESCRIPTION
1	3976252	Miscellaneous
		Parts Bag
2	16123	Washer, Inlet
		Hose
		(1–1/16 x 5/8) (4)
4	3359452	Nut, Lock
		(3/8–16)
5		Foot, Front (2)
7	3366912	Clamp, Hose
8	3366913	Clamp, Hose

LITERATURE AND OPTIONAL PARTS

Illus. **Part**

No. No. **DESCRIPTION**

LITERATURE PARTS

LIT3949145 Sheet, Installation Instructions

LIT3363572 Guide, Use and

Care

LIT3949008 Energy Guide LIT3949340 Label, Wiring

Diagram

Following May Be Purchased

DO-IT-YOURSELF **REPAIR MANUALS**

LIT4313896 Manual, (Washer) Do-It-Yourself

Illus. **Part Part** Illus. No. No. **DESCRIPTION** No. No. **DESCRIPTION**

OPTIONAL PARTS NOT INCLUDED

PAINT, TOUCH-UP (1/2oz.)

72017 White 72107 Almond

72110 Golden Harvest

PAINT, PRESSURIZED SPRAY

(13 oz.)

350938 Primer, Gray

350930 White

350956 Almond

261890 Golden Harvest

PAINT, BULK (1 qt.)

799344 White (Uncut) 978883 Almond (Uncut) 261891 Golden Harvest

(Uncut)

OIL

350572 Oil, Gearcase (16 Oz.)

LUBRICANT

285208 Lubricant (Use Only in Brake Shoe Assembly On Roller and Pin)

SEALER

285195 Sealer, Gasket (.20 Fl. Oz.) (6 ml)

SHIPPING KIT

3348675 Shipping Kit

ACCESSORY PARTS

89121 Stand-Pipe Kit 367031 Drain Protector 285320 Siphon Break Kit

881475